INSTRUCTIONS FOR USE



# TRENDLINE-SERIES JOINTED ARM AWNING

841127\_EN

# TABLE OF CONTENTS

1.	BASIC INFORMATION	2
2.	EXPLANATION OF THE NOTICES	2
3.	VALIDITY	3
4.	SAFETY	3
5.	INTENDED USE	3
6.	PRODUCT INFORMATION	3 - 4
7.	OPERATION	5
7.1	GENERAL SAFETY NOTICES	5
7.2	OPERATING THE CRANK DRIVE	5
7.3	OPERATING THE ELECTRIC DRIVE	6
8.	CLEANING / CARE	6
9.	MAINTENANCE	6
10.	DISASSEMBLY	6
11.	EC CONFORMITY	7
12.	DECLARATION OF PERFORMANCE	8
13.	WARRANTY CERTIFICATE	9
	HANDOVER TO THE CUSTOMER	9

# 1. BASIC INFORMATION

Thank you for purchasing this **WO**UND**WO** product.

You must have read and understood these instructions for use before commissioning the products to ensure failure-free permanent operation. The notices in the instructions for use must be observed. Non-compliance shall release the manufacturer from its liability. Please also observe the notices on the product and on the packaging.

We request that you keep all the instructions (instructions for assembly and use) and hand them over to the new owner should you sell the awning.

## 2. EXPLANATION OF THE NOTICES

Safety notices and important information can be found at the corresponding point in the text. These are equipped with a symbol.



This symbol indicates notices that are important for people's safety or for the awning's function.



This symbol indicates important product information for the user.



## 3. VALIDITY

These instructions for use are valid for the following **WO**UND**WO** standard jointed arm awnings: TRENDLINE CASSETTE, TRENDLINE SUNBOX, TRENDLINE SMARTBOX, TRENDLINE.

# 4. SAFETY



It is important to follow these instructions for people's safety. These instructions must be kept.

All **WO**UND**WO** awnings are designed and manufactured in line with the provisions set forth in the EN 13561 standard. Nonetheless, dangers can arise for the people involved and/or the product can be impaired or other property damaged.

#### OPERATING MOTORISED OPERATION AWNINGS:



 
Do not allow children to play with the awning's control unit. Keep remote controls out of the reach of children. Examine the equipment regularly for signs of wear or damage on the cables. Observe the programming instructions of the supplied control units.



Do not use if a repair is required.

#### MANUALLY OPERATING AWNINGS USING A CRANK HANDLE:

Take care when manually operating the retracted awning, as it can fall down quickly due to springs that are too weak or broken.



## 5. INTENDED USE

**WO**UND**WO** jointed arm awnings are primarily designed to protect against solar radiation. They can also be used as rain protection to a limited extent (see 7.1. for details). Any other use or use that extends beyond this shall be deemed improper. The manufacturer assumes no liability for any resultant damages.

No changes, additions or conversions may be made to the jointed arm awnings without the manufacturer's consent. Jointed arm awning parts in an imperfect condition must be replaced immediately. Only genuine spare parts specified by the manufacturer may be used. In the case of parts sourced from third parties, there is no guarantee that these have been designed and manufactured in line with safety and loading requirements.

If the jointed arm awnings suffer additional loading as a result of suspended objects or the cord slackening, this can lead to the jointed arm awnings malfunctioning and becoming damaged. Such actions are therefore impermissible.

Assembly and maintenance work may only be performed by qualified staff.

The connection must be fused and de-energised whilst inspecting or maintaining electrical parts.

WO&WO Sonnenlichtdesign GmbH & Co KG assumes no liability for damages caused by improper use.

#### 6. PRODUCT INFORMATION

#### **TECHNICAL DATA**

The dimensions and technical details of jointed arm awnings can be found in the current catalogue available from specialist dealers, in the instructions for assembly or in the **WO**UND**WO** partner area at www.woundwo.com.

#### DATA FOR THE ELECTRIC DRIVE

PARAMETER	VALUE
Mains voltage	230 V AC
Current consumption	0.45 – 2.1 A (depending on the drive)
Power consumption	90 – 460 W (depending on the drive)
Protection class – electric drive	IP 44
Permanent operation – motor	Approx. 4 minutes



The electric motor is not designed for permanent operation. After approx. 4 minutes of operation, the thermal protection starts and the motor switches off. The motor is ready for operation again after 15 - 30 minutes. However, the new actuation time is considerably reduced, lasting 1 - 2 minutes.

## CE CONFORMITY AND THE DIN EN 13561 STANDARD

The DIN EN 13561 standard defines the minimum standards that awnings must meet. Products that meet this standard are considered conforming for the purposes of CE. Since <sup>1st</sup> of march 2006, it has been illegal to market products that do not conform to CE requirements.

Key contents of this standard are the classification of the awnings into wind resistance classes and the defining of appropriate fastening elements depending on the substructure. In addition, the forces acting on fixing screws must be documented.

## WIND RESISTANCE CLASSES

Wind force according to the Beaufort scale	9	8	7	6	5	4	3	2	1	0
Wind resistance class according to DIN EN 13561:2015	6	5	4	3	2	1	0			
Wind speed in km/h	max. 88	max. 74	max. 61	max. 49	max. 38	max. 28	max. 19	max. 11	max. 5	undefined; product untested or unsuitable

**WO**UND**WO** awnings and their components are designed and manufactured in compliance with DIN 13561. The various awning types are ranked according to their wind resistance class. Our product categories are classified as follows:

		WIND RESISTANCE CLASS (WRC) according to DIN EN 13561:2009						
PRODUCT	Projection in mm Vario valance	1500	2000	2500	3000	3500	4000	4500
	-	3	3	3	3	3	2	-
TOPLINE CASSETTE	with	3	3	3	2	2	1	-
	-	3	3	3	3	3	3	2
TOPLINE PLUS	with	3	3	3	3	3	2	-
TODUNE	-	3	3	3	3	3	3	2
TOPLINE	with	3	3	3	3	3	2	-
	-	3	3	3	2	2	-	-
TRENDLINE CASSETTE	with	3	3	2	2	-	-	-
TRENDLINE SUNBOX	-	2	2	2	2	2	-	-
TRENDLINE SMARTBOX	-	2	2	2	2	1	-	-
	-	3	3	3	2	2	-	_
TRENDLINE	with	3	3	2	2	2	-	-
SWINGLINE CASSETTE	-	3	3	2	2	-	_	-
SWINGLINE	-	3	3	2	2	-	_	_
FIRSTLINE	_	2	2	1	-	_	_	_
BASICLINE	-	2	2	1	-	_	_	-
WINGLINE	-	2	2	2	2	2	2	2

<u>/!</u>

The jointed arm awnings may only be used up to the wind resistance class declared by the manufacturer. The wind class may only be downgraded due to poor assembly conditions in exceptional cases and with the end user's consent.

#### NOISE EMISSION

The sound pressure level of this awning when disassembled is less than 70 dB(A) when measured pursuant to EN ISO 12100-2:2003.

#### ACCESSORIES

The following accessories are available for **WO**UND**WO** jointed arm awnings:

- Wireless remote control
- Automatic sun / wind / rain control
- Room thermostat
- Vario valance
- Light strip
- Radiant heater

Detailed information about the right accessories and how to integrate them is available from all WOUNDWO specialist dealers.



## 7. OPERATION

## 7.1 GENERAL SAFETY NOTICES FOR OPERATING JOINTED ARM AWNINGS



Jointed arm awnings may only be operated by persons who have received instruction from specialist staff. Ensure that children do not operate the awning unattended. Keep remote controls out of the reach of children.



When working in the area surrounding the jointed arm awning's deployment area, the automatic control (wind, sun control) must be switched off with a monitored, priority switching locking device (e.g. key switch), such that the jointed arm awning cannot be extended when controlled automatically.



Jointed arm awnings should be retracted at night and before leaving home.

Do not extend jointed arm awnings in freezing, snowy or very windy conditions. Jointed arm awnings can be used as rain protection to a limited extent. For this, the awning must be fully extended and the minimum incline is  $14^{\circ}$  (25%). Unsupervised use as rain protection is not permissible, as it is not entirely possible to exclude the formation of water pockets.



Fixed objects must be at least 40 cm away from the extension area of the drop profile.

The Vario valance (an optional accessory) must be rolled up before the jointed arm awning is retracted.

## 7.2 OPERATING JOINTED ARM AWNINGS WITH A CRANK DRIVE

#### A) SERIES: TOPLINE (TOPLINE, TOPLINE PLUS, TOPLINE CASSETTE), TRENDLINE (TRENDLINE, TRENDLINE CASSETTE, TRENDLINE SUNBOX, TRENDLINE SMARTBOX)

**EXTENDING THE AWNING:** Hook the crank handle into the gearbox eye and extend the awning by turning the crank anti-clockwise until the awning reaches either the desired or the end position. The awning's end position (fully extended) is permanently set in the factory. The awning cloth remains tensioned at all times during this process. If the awning cloth loses tension, the tension should be restored by retracting the jointed arm awning.

RETRACTING THE AWNING: Turn the crank handle anti-clockwise until the awning is closed.



When the inside and outside end positions have been reached, do not continue to forcibly turn the crank handle. There is the risk of damages to the gearbox and of the cloth overexpanding or folding.

#### B) SERIES: SWINGLINE (SWINGLINE, SWINGLINE CASSETTE)



 
The crank gearboxes of the SWINGLINE series of awnings have no end stop on the front, but a freewheel to prevent incorrect cloth winding. At this point, however, the cloth can sag without any tension.

**EXTENDING THE AWNING:** Hook the crank handle into the gearbox eye and extend the awning by turning the crank anti-clockwise until the freewheel reaches the end point and the cloth is relieved of tension. Briefly turning back achieves the best cloth tension.

**RETRACTING THE AWNING:** Turn the crank handle anti-clockwise until the awning is closed.

Do not continue to forcibly turn the crank handle when it reaches the end positions inside. There is a risk of damages to the gearbox and of the cloth overexpanding or folding. This is prevented on the outside by the freewheel.

#### C) SERIES: FIRSTLINE, BASICLINE



EXTENDING THE AWNING: Hook the crank handle into the gearbox eye and extend the awning by turning the crank anti-clockwise until the end point is reached and the cloth is tensioned.

RETRACTING THE AWNING: Turn the crank handle anti-clockwise until the awning is closed.



Do not continue to forcibly turn the crank handle when it reaches the end positions inside. There is a risk of damages to the gearbox and of the cloth overexpanding or folding.

### 7.3 OPERATING JOINTED ARM AWNINGS WITH AN ELECTRIC DRIVE

) When the system is being handed over, specialist staff must provide instruction on operating the electric drive. During this process, an explanation of how the operating elements are assigned is provided.

**EXTENDING THE AWNING:** Press (and hold) the operating element and extend the jointed arm awning until it reaches either the desired or the end shading position. The end position is reached when the motor switches off.

**RETRACTING THE AWNING:** Press (and hold) the operating element and retract the jointed arm awning until it reaches either the desired or the end shading position. The end position is reached when the motor switches off. Please refer to the documentation for control and operating units for additional notices about special functions.

## 8. CLEANING AND CARE

<u>/!</u>

Use suitable climbing aids and de-energise the drive motor!

Remove the cover for the lateral part from the cassette before cleaning the TRENDLINE SMARTBOX!

No high-pressure cleaners, scouring agents or scouring pads should be used for cleaning! Solvents such as alcohol or benzine must not be used!

#### CLEANING THE PRODUCT:

Dirt can be removed from the jointed arm awning using a soft brush or hand brush. Clean the awning cloth using a fine liquid detergent and rinse thoroughly with cold water. The frame of the jointed arm awning can be cleaned using a commercially available cleaner and wiped with a damp cloth. The awning cloth must be left to dry after cleaning.

## 9. MAINTENANCE

Reliable and safe use of the jointed arm awning can only be guaranteed if the system is checked and maintained on a regular basis.

The jointed arm awning is to be checked regularly for signs of wear and damage on the cover and frame. If damages are found, the specialist dealer or a suitable servicing company is to be tasked with the repair work. Jointed arm awnings needing repair must not be operated.

## 10. DISASSEMBLY



Improper assembly activities can result in personal injury or property damage.

Only have a **WO**UND**WO** specialist dealer perform disassembly work. Please refer to the product instructions for assembly for specifications / notices.



**DECLARATION OF PERFORMANCE** DOP NO. 210011306

Identification code JOINTED ARM AWNING for the product type: (TOPLINE CASSETTE, TOPLINE PLUS, TOPLINE; TRENDLINE CASSETTE, TRENDLINE SUNBOX, TRENDLINE, TRENDLINE SMARTBOX; SWINGLINE CASSETTE, SWINGLINE; FIRSTLINE; BASICLINE; WINGLINE) Intended purpose: Awning for outdoor use WO&WO Sonnenlichtdesign GmbH & Co KG, Hafnerstraße 193, 8054 Graz, Austria Manufacturer: Authorised representativeDipl. Kfm. Volker Schmidt According to Rating System 4 of the Construction Products Regulation 305/2011/EC Certification:

Declared performance: Wind resistance class 0 - 2 pursuant to EN 13561

WIND RESISTANCE CLASS	DESCRIPTION	WIND STRENGTH (ON THE BEAUFORT SCALE)	WIND SPEED						
Class 0	undefined; product untested or unsuitable								
Class 1	moderate wind	4	20 - 28 km/h						
Class 2	fresh wind	5	29 - 38 km/h						

The order's delivery slip, on which the product-specific wind resistance classes per order item are printed, serves as a supplement to this Declaration of Performance. When used as intended, the product satisfies the essential properties defined in the following standards.

Harmonised standard:

EN 13561 External blinds – Performance requirements including safety

chuidt

Dipl. Kfm. Volker Schmidt Authorised representative

Graz, April 2018

WO&WO Sonnenlichtdesign GmbH & Co KG Hafnerstraße 193 8054 Graz, AUSTRIA

Tel +43 (0)316 2807-0 office@woundwo.at www.woundwo.com

UID-Nr. ATU 63750435, Firmenbuch: Landesgericht Graz Nr. 299812 a Komplementår: WO&WO Sonnenlichtdesign GmbH, Firmenbuch: Landesgericht Graz Nr. 298579 m



# **13. WARRANTY CERTIFICATE**

# **5-YEAR GUARANTEE**



#### 1. WARRANTY PERIOD

- 1.1. Within the warranty period of 5 years from delivery, we will remedy all defects to the awning which can be proven to result from manufacturing, material or design defects.
- 1.2 The 5-year warranty automatically comes into effect upon delivery of the awning.
- 2. CONDITIONS FOR THE PROVISION OF WARRANTY SERVICES ARE:
- Immediate inspection of the awning upon delivery to ensure it is free from defects. If defects are found, the awning must not be installed.
- 2.2. The awning is correctly installed by the authorised WOUNDWO specialist dealer in accordance with the assembly instructions, using only original mounting parts.
- 2.3. You must notify us promptly in <u>writing</u> in the event of any claim. Please provide the following information: date of damage, nature and extent of the damage, invoice date and number, name and address of the customer.

#### 3. SETTLEMENT OF CLAIMS

- 3.1. Where defects are accepted by us as being covered by warranty, the remedying of such defects will involve the specialist dealer dismantling the awning and sending it to our factory.
- 3.2. We will assume all material costs necessary to correct the defects that fall under the terms of the warranty within the period specified in Item 1.

## 4. THE FOLLOWING ARE EXCLUDED FROM THE WARRANTY:

- 4.1. Damage to the awning caused by improper installation as a result of failure to follow the installation instructions and failure to use original mounting parts.
- **4.2.** Damage caused by force majeure and exceptional loads, such as the effects of extremely high winds, snow, rain or ice.
- 4.3. Minor cosmetic flaws' in awning fabrics, which are set out in the 'Guidelines for the evaluation of ready-made awning fabrics' produced by the IVRSA (ITRS e.V. professional group), do not constitute a defect and are therefore not covered by the warranty.
- 4.4.Parts that are subject to normal wear. These include motors, gearboxes, controllers and covers.
- 4.5. Visual flaws

#### 5. OTHER PROVISIONS

- 5.1. If a damage incident necessitates inspection by our customer service department, no changes must be made to the awning under investigation.
- **5.2.** In the event of a damage incident, the subsequent procedure will be conducted in writing. For insurance reasons, it is not possible to resolve the matter over the telephone.
- 5.3. All claims under the warranty shall be null and void if third party spare parts are used or following any repairs made by persons who are not authorised **WO**UND**WO** specialist dealers, or if any changes are made to the awning.

## HANDOVER TO THE CUSTOMER

To make subsequent enquiries or suggestions about the product easier, the product data should be documented by the specialist dealer.

Assembly date

Handed over by / on: (Specialist dealer's stamp and signature)





Printing errors excepted. Subject to change without notice. Publisher: WO&WO Sonnenlichtdesign GmbH & Co KG Content: WO&WO Sonnenlichtdesign GmbH & Co KG Place of publication: 8054 Graz, AUSTRIA.